 

Disposable Line

Auto Stop Cranial Perfurator (Trepanation)

The Auto Stop Cranial Perfurator is indicated for performing the initial access in craniotomy procedures through trepanation holes, with its action automatically interrupted upon contact with soft tissues




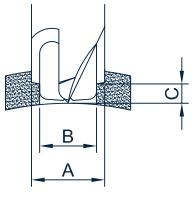

INSTRUCTIONS FOR USE (IMPORTANCE OF PROPER **POSITIONING):**

To ensure a safe and effective operation, it is extremely important to maintain the precise position (90°) of the perfurator in relation to the cranium. This position must be constantly kept in mind throughout the entire drilling process.

Coupling Types

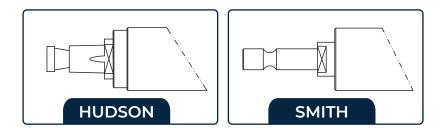

Technical Information



ANVISA REGISTER HUDSON: 80482490025 SMITH: 80482490003 HUDSON / SMITH:





STERELIZATION ETHYLENE OXIDE












www.biometal.med.br 🖓 +55 (19) 3495-2485 🙀 vendas@biometal.med.br

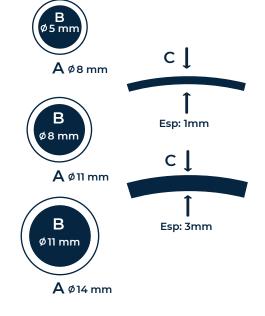

Biometal®

CUTTING SURGICAL INTRUMENTS

A - External perforation diameter B - Internal perfuration diameter C - Minimum skull thickness required for automatic stop system to activate